



## BTL spare parts

Nr.	Description	Gas	BTL 85	BTL 100
			Part number	
1	Flue Baffle		0196172001(S)	0313200(S)
2	Anode		0183463039(S)	0183463050(S)
3	Anode Flexible		0304728(S)	0304728(S)
4	Drain Valve Kit		0301022(S)	0301022(S)
5	Burner		0313202(S)	0313203(S)
6	Burner Tube		0313201(S)	0313201(S)
7	Burner Gasket		0313204(S)	0313204(S)
8	Thermocouple		0071872(S)	0071872(S)
9	Cable of Piezo Ignitor		0313246(S)	0313246(S)
10	Electrode Ignition		0071608(S)	0071608(S)
11	Gas Control	NAT	0300949(S)	0300949(S)
		LP	0301914(S)	0301914(S)
12	Piezo Igniter		0307596(S)	0307596(S)
13	Clean out service kit		0305082(S)	0305082(S)
14	Cold water Inlet		0313205(S)	0313206(S)
15	Thermostat roll out protection		0308237(S)	0308237(S)
16	Cable connection TRS		0305346(S)	0305346(S)
17	Complete pilot burner assy	NAT	0313230(S)	0313230(S)
		LP	0313231(S)	0313231(S)
18	Gasket pilot burner assy		0313363(S)	0313363(S)

## BTL conversion sets

	Description	Gas	BTL 85	BTL 100
			Part number	
	Conversion set to LP	LP	0313172(S)	0313174(S)
	Conversion set to NAT	NAT	0313173(S)	0313175(S)

## BTL accessories

	Description	Gas	BTL 85	BTL 100
			Part number	
	Inlet Security Group		0302706(S)	0302706(S)
	Temp. & Pressure valve (T&P)		0076527004(S)	0076527004(S)
	Inlet Security Set DN32		-	0309926(S)
	Gas cock		0300718(S)	0300718(S)

