



TWI II spare parts

Nr.	Description	TWI II
		Part number
1	Sensor Kit	0313306(S)
2	Pressure Switch	0324512(S)
3	Burner and gasket	0313305(S)
4	Blower and gasket	0313313(S)
5	Spark Igniter	0313304(S)
6	Gas Valve	0313302(S)
7	Control board	0313312(S)
8	Drain Valve	6907316(S)
9	Fuse Holder	0313362(S)
10	Fuse	0313361(S)
11	Condensate Drain	0313290(S)
12	Connector Venturi	0313291(S)
13	Water Inlet tube	0313310(S)
14	Air Inlet Filter	3710169 (S)
15	Sensor Kit	0313301(S)
16	ON/OFF switch	0313309(S)
17	Ignition Transformer	0313311(S)
18	Flame Rod	0313303(S)
19	Display	0313308(S)
20	Housing display	0313307(S)
21	Hose connector Drain Valve	0070065(S)

TWI II conversion sets

	Description	TWI II
		Part number
	Conv. Set to LP	0313335(S)
	Conv. Set to NAT	0313336(S)

TWI II accessories

	Description	TWI II
		Part number
	Gas Cock	0300719(S)
	Inlet Security Group	0070066003(S)
	Dscale (set with components)	0307564(S)
	Dscale (box with 6 bottles)	0311398(S)
	T&P valve	0306755(S)
	Flow Restrictor build in 3/4" - 12 l/min.	0309730(S)
	Flow Restrictor build in 3/4" - 10 l/min.	0309731(S)
	Flow Restrictor build in 3/4" - 8 l/min.	0309732(S)
	Flow Restrictor build in 3/4" - 6 l/min.	0309733(S)

